

TOP GLOVE SDN. BHD

WORK INSTRUCTION

pH TEST

Purposes/Function/Objective

- To check the pH of latex or chemical in manufacturing process for both latex and synthetic latex.

Materials/ Chemicals/

Tools/Equipment

1. Latex @ Chemical in
In coming & production line.
2. Beaker
3. pH meter probe.
4. pH table top.

Specification

- Record the pH reading,
shows on pH meter table
- Top at room temperature.

Form/s:

- NIL

References :

- ISO 976

(Effective Date : 02/05/2011)

Procedures

1


Take any convenient size of
sample. (min 50ml)

2



Rinse the pH meter probe with
distilled water.

3

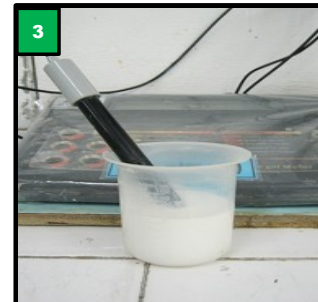

Dip the pH meter probe inside
the sample.

4



Rinse the pH meter probe with
distilled water.

5

Record the pH result show on pH table top
screen

| Prepared by: | Verified by: | Approved by: |
|------------------------|--------------------|---------------------------|
| Noor Azura Binti Azman | Al-Fadilah Mohamad | Noor Akilah Saidin |
| QA/MQC Asst Supervisor | QA Executive II | QA Deputy General Manager |